

# Seznam frekvencí podle čísel kanálů

	analog (MHz)	digital (MHz)		analog (MHz)	digital (MHz)
R1	49.75	52.5	C21	471.25	474
R2	59.25	61.5	C22	479.25	482
R3	76.25	78.5	C23	487.25	490
R4	83.25	85.5	C24	495.25	498
	90.25	92.5	C25	503.25	506
R5	97.25	99.5	C26	511.25	514
S1	105.25	107.5	C27	519.25	522
S2	112.25	114.5	C28	527.25	530
S3	119.25	121.5	C29	535.25	538
S4	126.25	128.5	C30	543.25	546
S5	133.25	135.5	C31	551.25	554
S6	140.25	142.5	C32	559.25	562
S7	147.25	149.5	C33	567.25	570
S8	154.25	156.5	C34	575.25	578
S9	161.25	163.5	C35	583.25	586
S10	168.25	170.5	C36	591.25	594
	175.25	177.5	C37	599.25	602
R6	182.25	184.5	C38	607.25	610
R7	189.25	191.5	C39	615.25	618
R8	196.25	198.5	C40	623.25	626
R9	203.25	205.5	C41	631.25	634
R10	210.25	212.5	C42	639.25	642
R11	217.25	219.5	C43	647.25	650
R12	224.25	226.5	C44	655.25	658
S11	231.25	233.5	C45	663.25	666
S12	238.25	240.5	C46	671.25	674
S13	245.25	247.5	C47	679.25	682
S14	252.25	254.5	C48	687.25	690
S15	259.25	261.5	C49	695.25	698
S16	266.25	268.5	C50	703.25	706
S17	273.25	275.5	C51	711.25	714
S18	280.25	282.5	C52	719.25	722
S19	287.25	289.5	C53	727.25	730
S20	294.25	297	C54	735.25	738
S21	303.25	306	C55	743.25	746
S22	311.25	314	C56	751.25	754
S23	319.25	322	C57	759.25	762
S24	327.25	330	C58	767.25	770
S25	335.25	338	C59	775.25	778
S26	343.25	346	C60	783.25	786
S27	351.25	354	C61	791.25	794
S28	359.25	362	C62	799.25	802
S29	367.25	370	C63	807.25	810
S30	375.25	378	C64	815.25	818
S31	383.25	386	C65	823.25	826
S32	391.25	394	C66	831.25	834
S33	399.25	402	C67	839.25	842
S34	407.25	410	C68	847.25	850
S35	415.25	418	C69	855.25	858
S36	423.25	426	C70	863.25	866
S37	431.25	434	C71	871.25	874
S38	439.25	442	C72	879.25	882
S39	447.25	450	C73	887.25	890
S40	455.25	458	C74	895.25	898
S41	463.25	466			

kanál C je někdy označován také jako K nebo E  
kanál R je někdy označován také jako E

analog zvuk:

DK norma +6.5Mhz východní  
BG norma +5.5Mhz západní